 



HOW TO CONNECT RECEIVER




HANDHELD TRANSMITTER

DIAGRAM 1

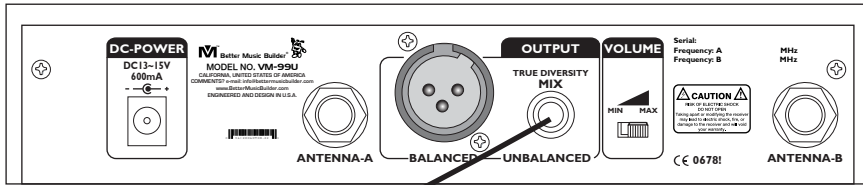

RECEIVER REAR VIEW

Unbalance Connection

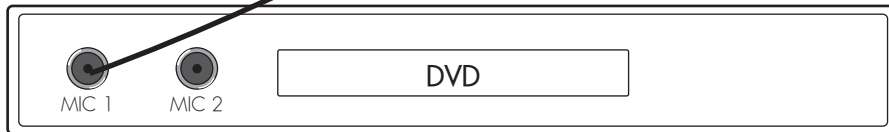


DVD KARAOKE PLAYER



Standard Connection: Unbalanced 1/4 connection

Better Music Builder recommend you to use the best connection for your system.


DIAGRAM 2

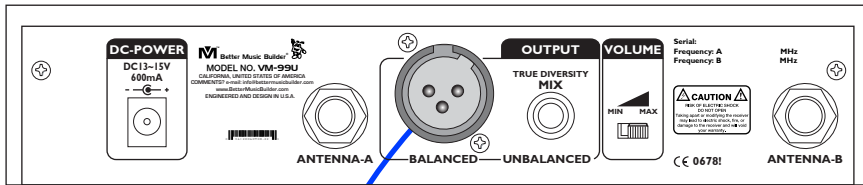


RECEIVER REAR VIEW

Balance Connection

 Optional: XLR balanced cable



Best Connection: Balanced 3-Pin XLR connection to prevent outside noise and upholds vocal clarity.

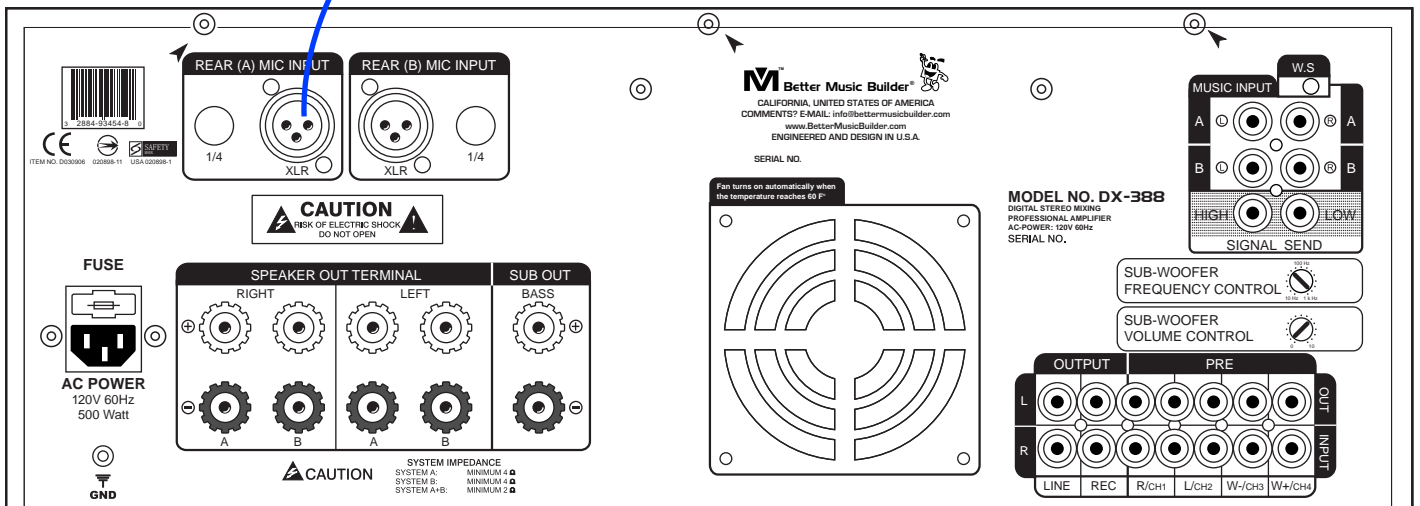

AMPLIFIER