



INSTALLATION SETUP


Follow the steps described in the diagram for mounting the speaker to the ceiling and wall. Use the right screws to mount the speaker onto the ceiling or wall.

Please note that the ceiling and wall mounting accessories and tools are not included in the package. You may order it separately from our authorized dealers.


1. MOUNTING THE SPEAKER TO THE CEILING

STEP 1: Hold the ceiling mount panel under the ceiling, then put four screws to fasten it.


NOTE The structure of the ceiling must be strong enough to hold at least 50 pounds.

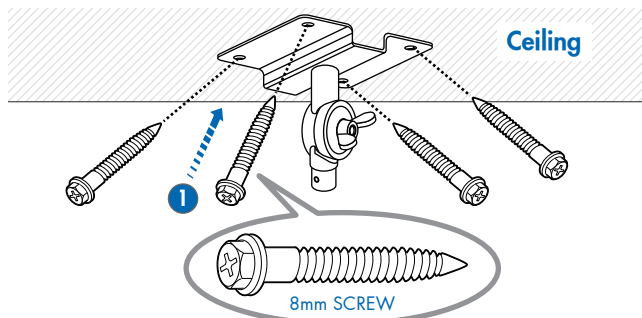

STEP 2: Four 6-mm screws come with the package. Three 6-mm screws already mounted on the speaker top. Only one 6-mm screw is provided for mounting kit as indicated in the following diagram.


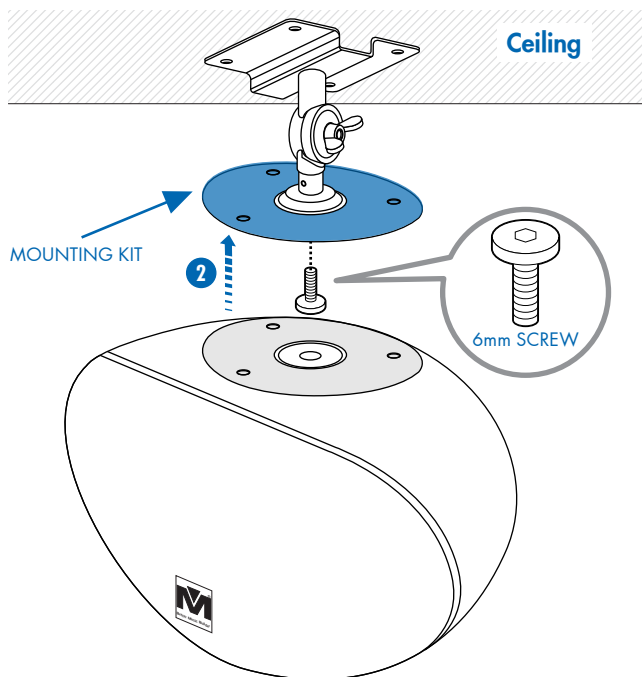


STEP 3: Place the ceiling mount panel on the top of the speaker cabinet and put three screws to fasten it.

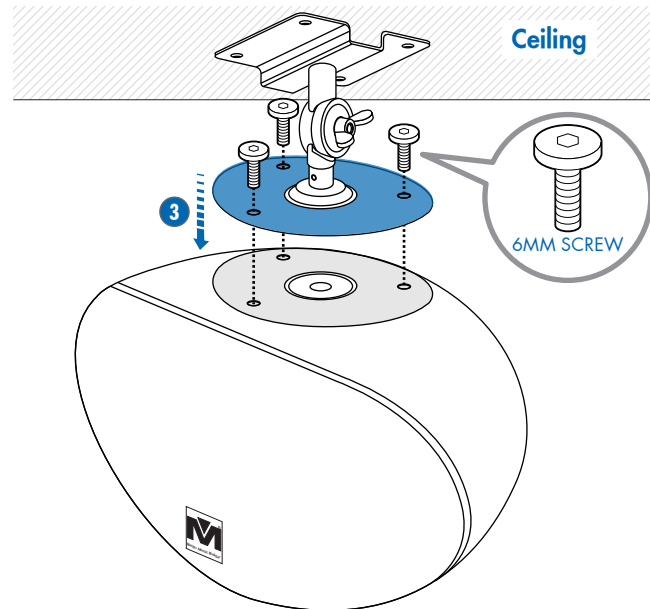

CEILING MOUNT BRACKET

The ceiling mount bracket is optional. You may order it from our authorized dealers near you. Please note that the ceiling mount is different from the wall mount.

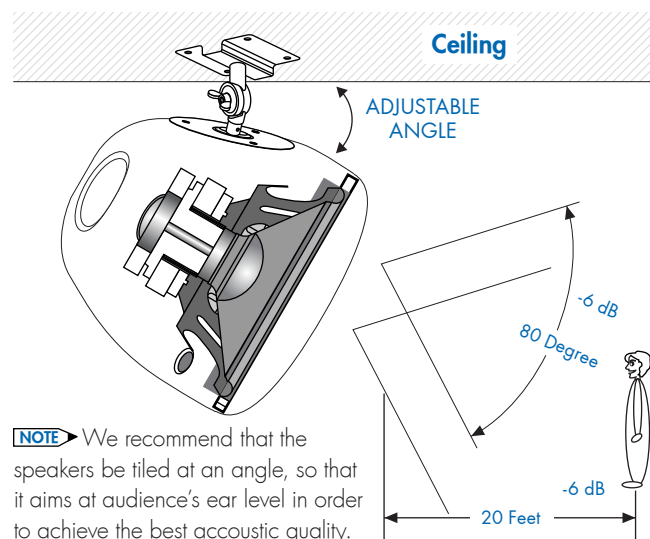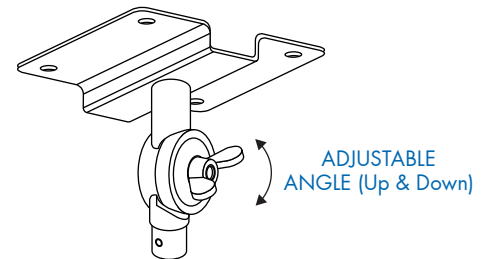


NOTE We recommend that the speakers be tilted at an angle, so that it aims at audience's ear level in order to achieve the best acoustic quality.




2. MOUNTING THE SPEAKER TO THE WALL

STEP 1: Place the wall mount panel on the wall and put three or more screws to fasten it.


NOTE The structure of the wall must be strong enough to hold up to 100 pounds.

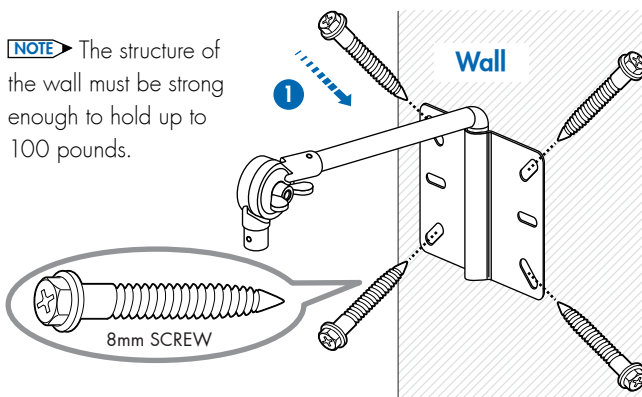


STEP 2: One 6-mm screw is provided for mounting kit as indicated in the following diagram. Make sure that you use the right kinds of screws to mount the speaker onto the wall or ceiling which are made up of different construction materials (i.e. wood or concrete, etc.).

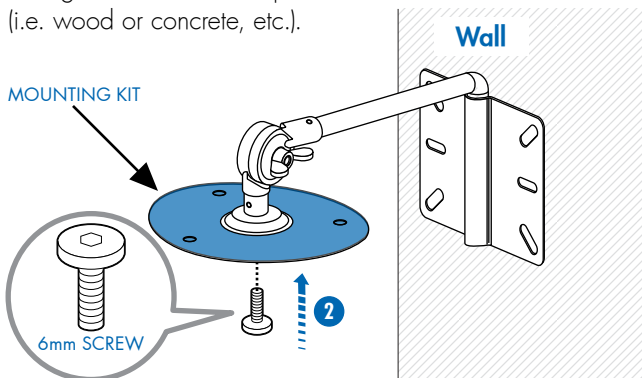

STEP 3: Place the wall mount panel on the top of the speaker cabinet and put three screws to fasten it.

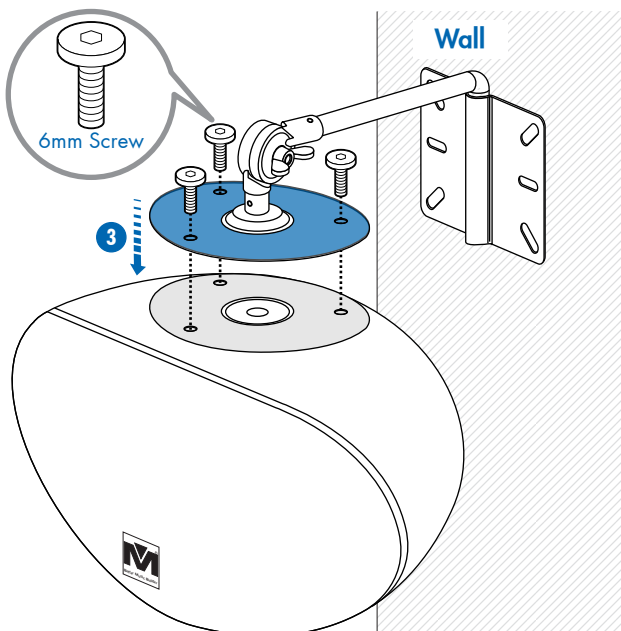


This Wall Mount Bracket can be a Ceiling Mount Bracket

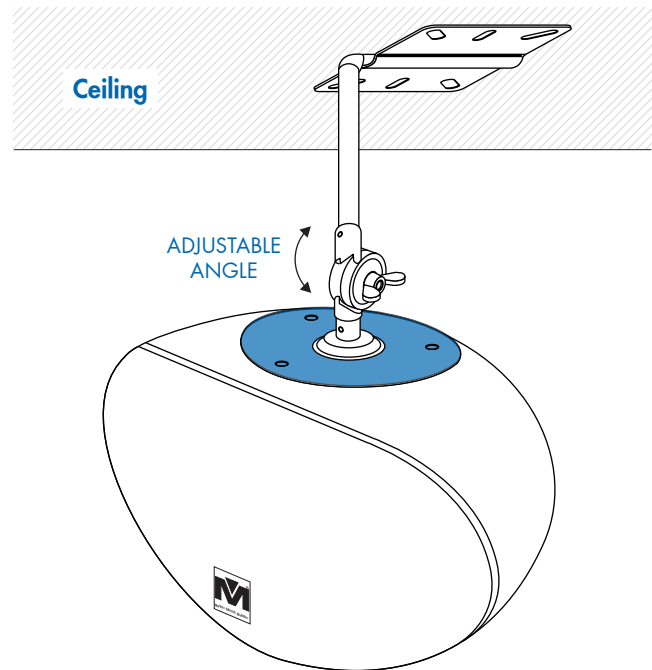


CEILING MOUNT BRACKET

The wall mount bracket is optional. You may order it from our authorized dealers near you. Please note that the wall mount is different from the ceiling mount.

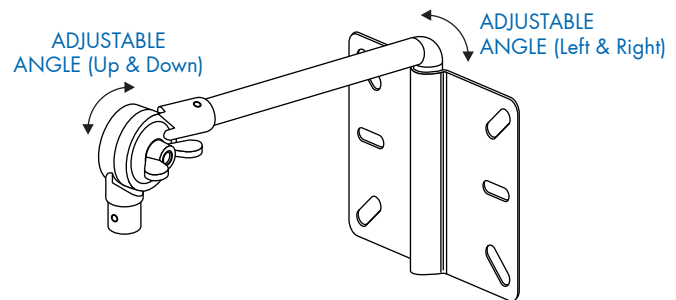

Mounting to Solid Wood or Wood Studs

In North America, most of the houses have 2"x4" wood studs inside the panel walls. You may use stud finder to locate the wood studs. Then, you can drive the screw into the wood stud to mount the speaker bracket and hold it firmly.

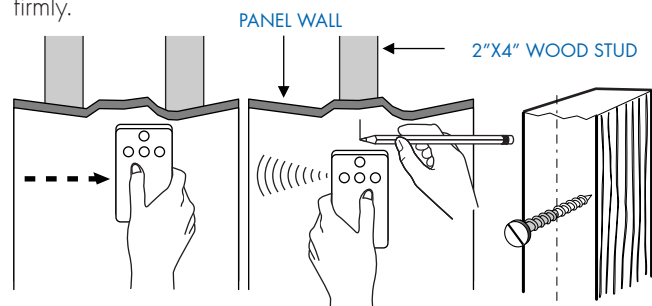




3. PLACING THE SPEAKERS ON THE PORTABLE STAND

The speakers can be mounted on to the optional portable stand, (see figure below). Make sure that the mounting system (hardware, stand, etc.) is capable of supporting four times the weight (approximately 25 lbs per speaker) of the speakers.

Floor Stand Mounting Kit Bracket

The speaker mount bracket for floor stand is optional. You may order it from our authorized dealers near you. Please note that the wall mount is different from the ceiling mount.

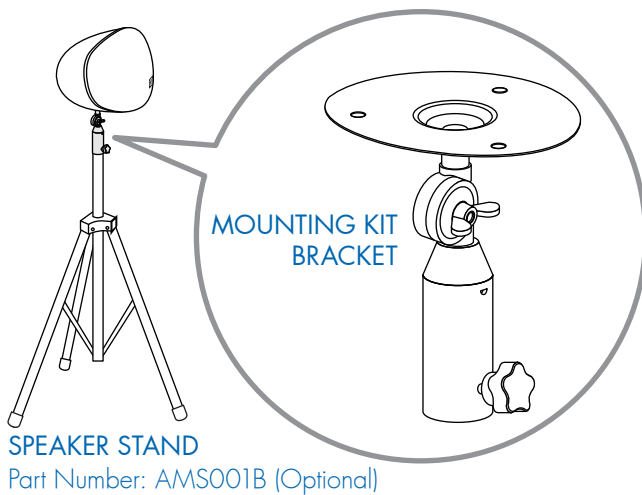

4. HOW TO OPEN GRILL COVER

- STEP 1:** Clench fist, and then knock the upper-right side of the cabinet with fist.
- STEP 2:** After the cabinet was knocked, the grill cover will be loosened and there will have a small gap between the cabinet and grill cover.
- STEP 3:** Insert a straight screwdriver into the gap, and pry the grill cover off the cabinet with the straight screwdriver.

